


SCL RA3 + SCL RA2 Part A removed rusty stains caused by welding sparks; rusty metal container; rusty penknife blade...

Required severe polishing when apply
SCL RA3 on marbles. Avoid using RA3 on
polished surface granites, limestones and
other sedimentary rocks.

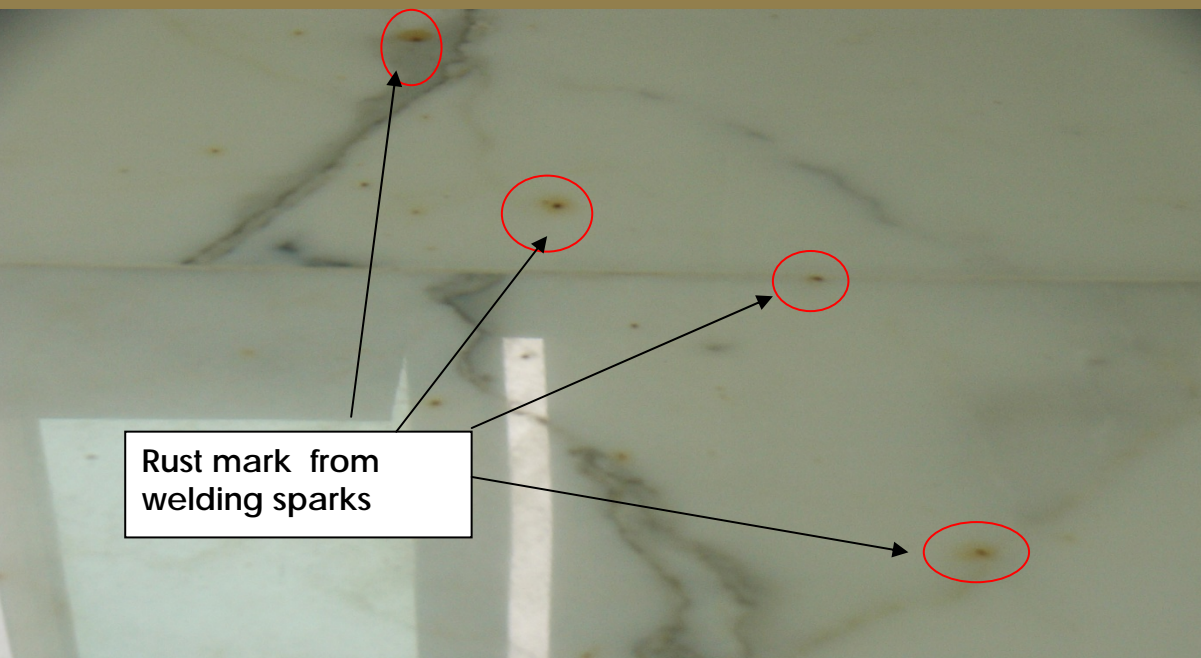

S
C
L
R
A
3



TECHNICAL BULLETIN

Description/Features

SCL-RA3 + RA2 Part A is designed to mix with SCL-DPP Poultrice Powder to remove external source causes such like rusty stains & welding sparks. SCL-RA3 can also be used alone.

Applicable on the type of stones:

Metamorphic rocks such as White Carrara Marble and flamed or matte finished granite.

Required a severe re-polishing when RA3 is applied on White Carrara marble.

Available sizes for RA3:

1-litre & 25 litres

Available sizes for DPP powder:

1-kg, 4-kg & 10kg

Application to remove rusty stains on white marble:

Two(2) parts of RA2 Part A + One(1) part of RA3 mixed with SCL-DPP Poultrice Powder.

Poultrice Procedures:

Step 1. Remove topical coating, (if any).

If a thin film of coating is noted, removed with SCL-XY stripper before poultrice. Otherwise, you are poultricing on the wax coating.

Step 2. Prepare the poultrice.

Mix SCL-DPP Powder with SCL-RA3 Part A & Part B (equal part) into a paste about the consistency of creamy peanut butter.

Step 3. Apply the poultrice.

Carefully apply the poultrice to the stained area. Not too thin, generally about 1/4 inch thick is sufficient for most stains.

Step 4. Cover the poultrice.

Cover the poultrice with a clear thin transparent plastic sheet or a plastic food wrap. Tape the poultrice with a low adhesive paper masking tape.

Step 5. Remove the poultrice.

Remove the poultrice after 48 hours.

Dispose them in a plastic bag.

If the stain has lightened, you possibly need a second attempt.

Clean the residues of the poultrice with SCL-Stoneclean or SCL-Stonemist.

Step 6: Polished the marble surface

You are required to polish the marble surface after the poultrice is removed.

Important Note:

- It is important that RA3 Part A is not allowed to mix with SCL-PPP Poultrice Powder.
- Do not apply SCL-RA3 on polished surface granite.

Purchasers are required to test the suitability of the product for their intended use. mcare Lab Pte Ltd makes no warranty, expressed or implied on the products and the effects. mcare Lab Pte Ltd shall not responsible for any risks or liabilities, direct, indirect or consequential arising out of the used or the inability to use the product.